




## ***Curve Forming Instructions***

To create concave curves simply cut straight through the spine of the base, and flex the Lite Edge to position as follows:

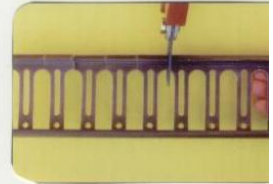

Concave curve easily formed using nothing more complex than a pair of secateurs.



Convex curves are created by removing sections of the spine.



Even tighter curves can be created by removing alternate pieces of the remaining base.

